



# AU-2214

## Rear Spring Shackles

Important Note: Do not overtighten. If you tighten the shackle nuts too much and twist off the ends, it is not because of a defective part, and we will have to charge for replacement.

- 1 Once the rear end mounting kit has been installed on the frame and all instructions and dimensions rechecked, all bolts may be tightened. Install the rear shackle by putting bushings in place on the shackle between the spring and the rear spring hanger.
- 2 Please be careful when tightening the shackle nuts. Do not over tighten them, as the outside shackle plate seats on the shoulder of the shackle studs and not when the bushings smash as far as possible.

