




AS-2051

1939-40 Ford Bolt-on Power Brake Adapter CE Brake Pedal Assembly

- 1** Bolt new adapter to pedal assembly.
- 2** Bolt CE power booster to CE adapter. Bump X member for clearance if needed. In order to use the power brake adapter, in some cases the pedal-side dust boot must be removed from the vacuum power booster as it isn't needed in this application. The adapter is designed to fit tightly on the front of the power booster assembly keeping dust and debris out. Add CE master cylinder. If end of master cylinder hits crossbrace of frame, cut slightly for clearance. Do not remove crossbrace. Installation clearances will vary from car to car and from master cylinder to master cylinder.

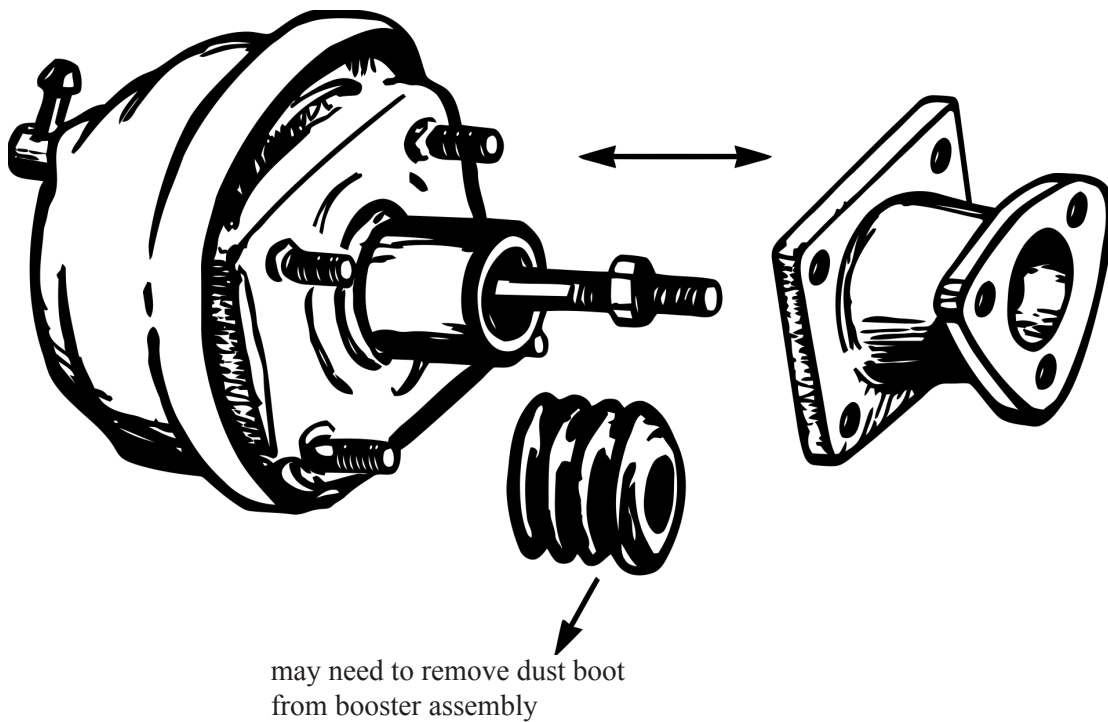

- 3** Linkage must be calculated and then fabricated by the installer.
- 4** IMPORTANT: Test the vacuum source to make sure that the vacuum port on the booster is supplied with at least 18lbs of vacuum. The booster needs at least 18lbs of vacuum to operate properly.