


# AS-2052

## 1933-40 Ford Bolt-on Power Brake Adapter CE Brake Pedal Assembly

Power brake adapter to fit 1932 thru 1940 Ford Cars with CE pedal assembly, CE power booster and master cylinder.

**NOTE:** CE supplies linkage only if brake pedal kit, adapter, booster and master cylinder are ordered as a set and all at one time. Linkage is normally the installers responsibility. There are too many combinations for us to cover.

- 1 Install CE pedal assembly by following directions included with the pedal.
- 2 Bolt new adapter to pedal assembly.
- 3 Bolt CE power booster to CE adapter. Bump X member for clearance if needed. In order to use the power brake adapter, in some cases the pedal-side dust boot must be removed from the vacuum power booster as it isn't needed in this application. The adapter is designed to fit tightly on the front of the power booster assembly keeping dust and debris out.

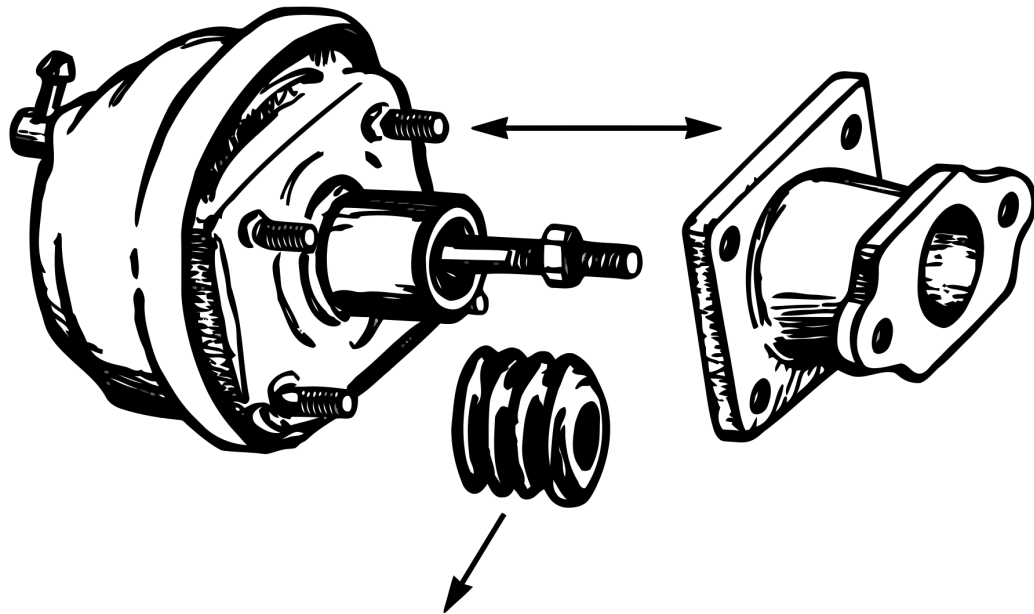

may need to remove dust boot  
from booster assembly

- 4 Add CE master cylinder. See linkage note above. If end of master cylinder hits crossbrace of frame, cut slightly for clearance. Do not remove crossbrace. Installation clearances will vary from car to car and from master cylinder to master cylinder.
- 5 **IMPORTANT:** Test the vacuum source to make sure that the vacuum port on the booster is supplied with at least 18lbs of vacuum. The booster needs at least 18lbs of vacuum to operate properly.