




AU-2235

1935-36 Chevy Master Car Radiator Support

- 1 Remove original radiator support (already done if an IFS is installed).
- 2 Match large hole in radiator mount to hole in side frame. Install 2 1/2" bolts.

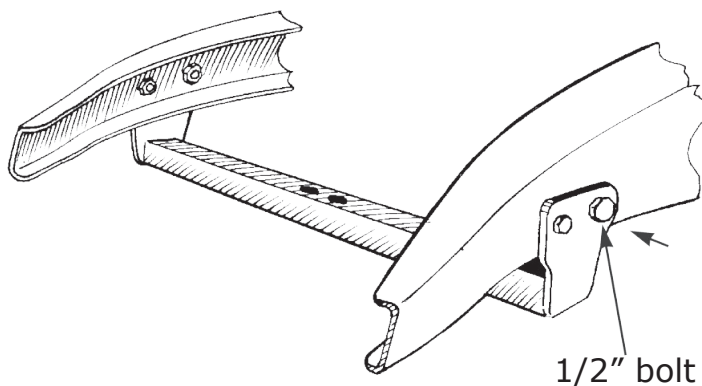

Note: this hole already exists in frame

- 3 Level mount and drill smaller holes thru frame.
- 4 Install bolts and tighten.

