
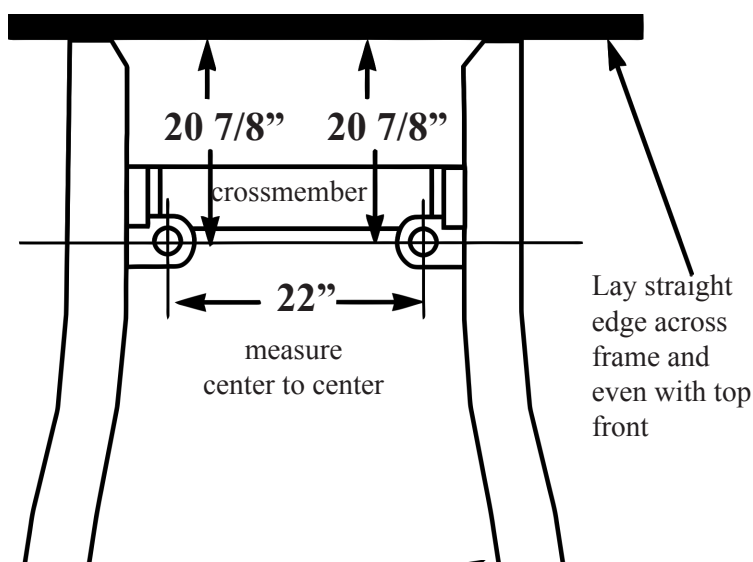


CP-2102G

1941-48 Ford Car Engine Swap Kit for Small Block Chevy Engines

Using Non-CE Weld-on Pinto Mustang Front Suspension

- 1** Install crossmember in frame. Remove original steering bracket at this time if not yet already done. We recommend using 3/16" boxing plates on this area. Grind any rivets flush with frame that interfere.
- 2** Frame adapter will need fitting to the boxing plates and new crossmember. It has proven impossible to furnish an exact fit since there are several variables involved in the crossmember installation. Fit frame adapters as required to these specifications.

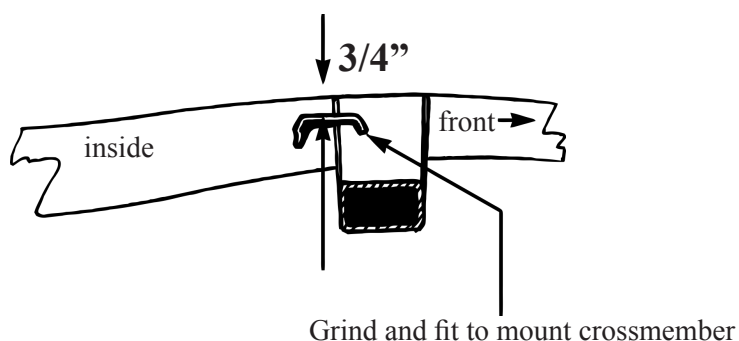

- 3** Be sure mounts are straight and level. Tack in place, then double check measurements and final weld.
- 4** Bolt engine mounts to block and install engine.
- 5** The car can now use other CE parts, such as transmission kits, without modification.

