

CP-2208 ES-2200



1933-34 Ford Flathead Ford Engine Mount Kit and Flat-O-Matic C4 Transmission (note: engine requires Pickup Truck water pumps)

1 Kit requires installation of front boxing plates. Remove original engine, transmission and unnecessary brackets. Frame rails should be checked for twist or out-of-square condition and corrected.

2 Once boxing plates are installed, tack-weld frame adapters in position flush with top of frame.

3 Double check measurements and place center transmission mount. Clamp in position and check fit.

4 Clamp bottom plate in place and line up to the dimensions shown. Once in place, center-punch all holes.

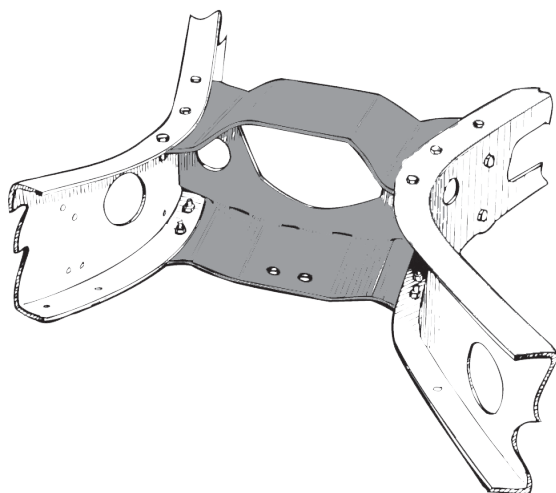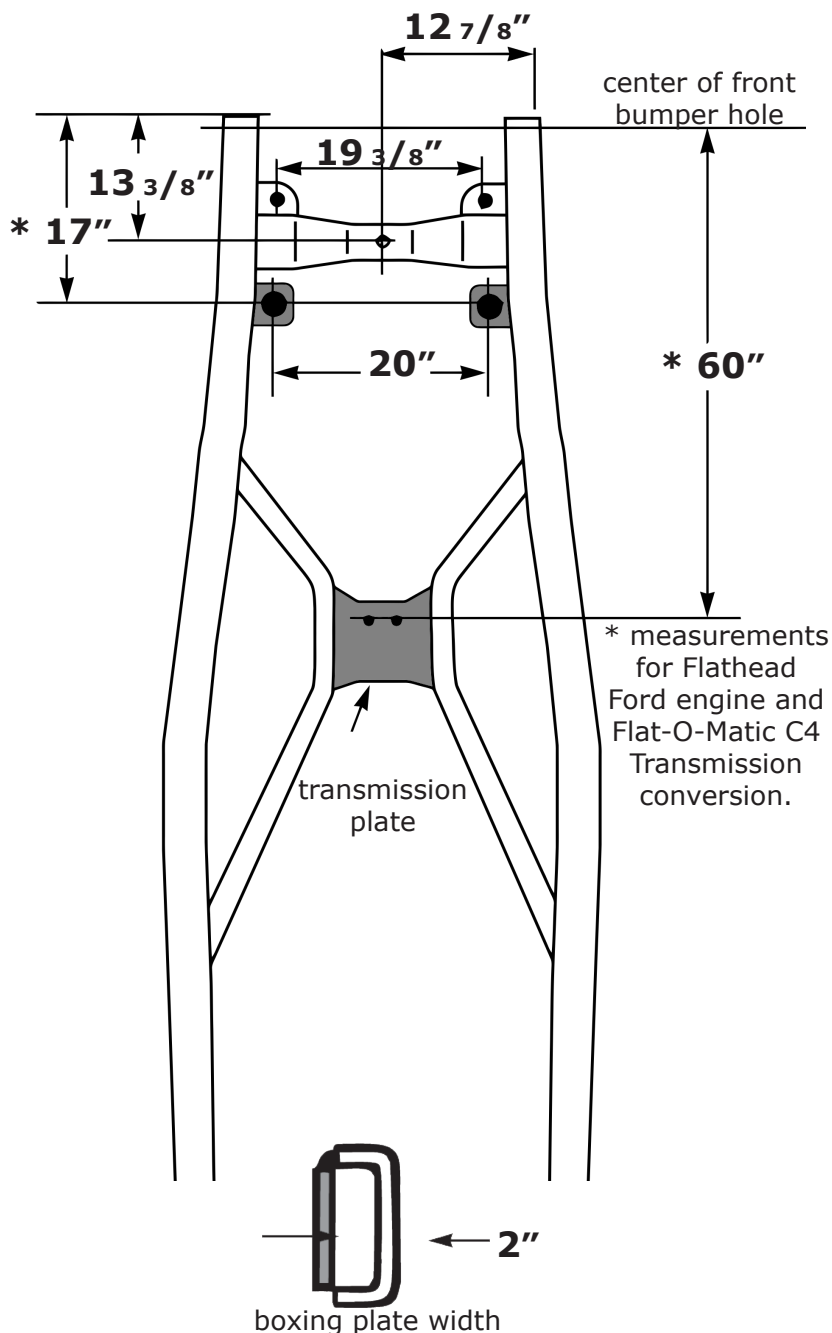

5 Install bottom transmission place. Place plate over center-punched marks and drill holes to 11/32 inch. Install bolts and fasten to X. Different transmissions may require custom fitting.