




SB-0050R

Universal Wide Rear Sway Bar for Parallel Leaf Rear Suspension

Note: It is the installers responsibility to determine the suitability of this part and installation

1 Determine location of mounting bracket or crossmember on vehicle frame. This may exist or need to be fabricated. Drill hole on mount to 3/8". Hold frame brackets in place and mark second hole. (Note: suspension or exhaust may interfere with bar in operation. Check for range of motion). Drill second hole to 3/8"

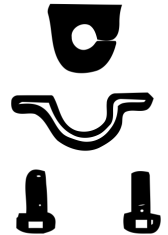

2 Place "D" shaped rubber bushing on bar, in line with the mounting holes. Install the frame brackets over bushing. Bolt thru brackets and frame.

3 If using CE lower shock plate, these plates withh have bottom sway bar mount as a standard feature. POn other applications not using CE lower shock plates, a 5/8" hole must be located at proper distance apart on such brackets.

4 Assemble linkage as shown. Do not over tighten.

