



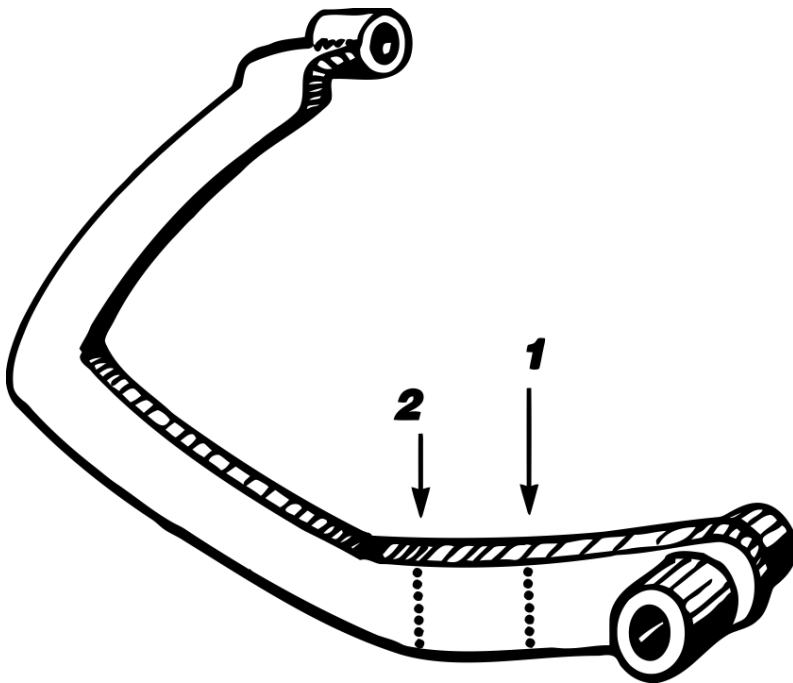


AS-2032

1932 Ford Pedal Bracket Adjustment


To adjust the pedal around the steering column, the pedal mounts must be heated and bent. Make sure that pedal is solidly mounted or clamped before adjustment. Your application may vary from that of the illustrations. Apply heat to the areas at which the bend will occur. Cherry-red before bending. Bend at point 1 first, then point 2 as shown below.

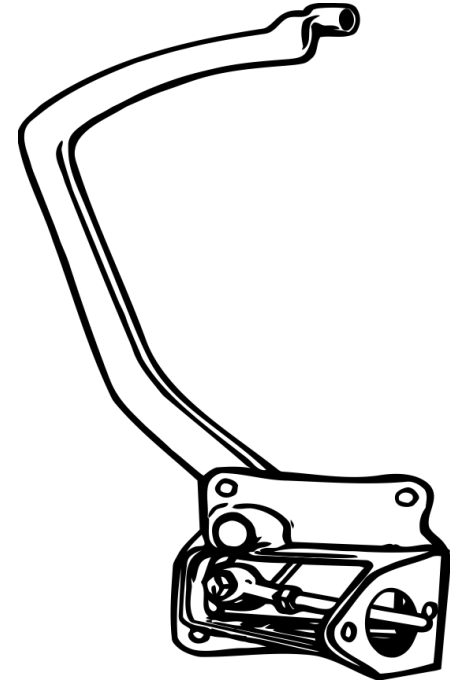

Once the pedal has been adjusted, it may appear somewhat like below. When possible, match floor and original location.

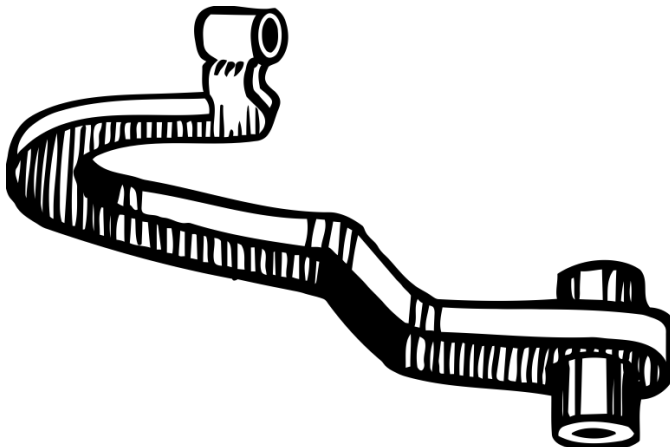

Note: Pedal linkage is not included and must be fabricated.

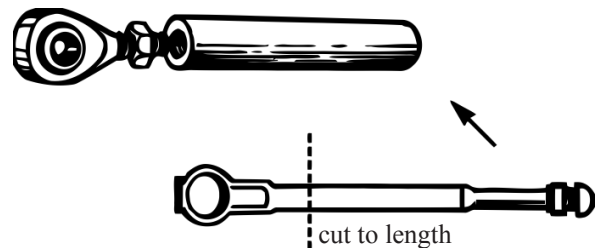

Use push rod supplied with master cylinder. Cut to size needed