


AS-1048PT

1948-54 Chevy Pickup Bolt-on Brake Pedal Bracket & Master Cylinder mount for power or manual brake application


- 1 Remove rivets holding original master cylinder mount to frame. Retain original holes for later use by drilling out rivets carefully.

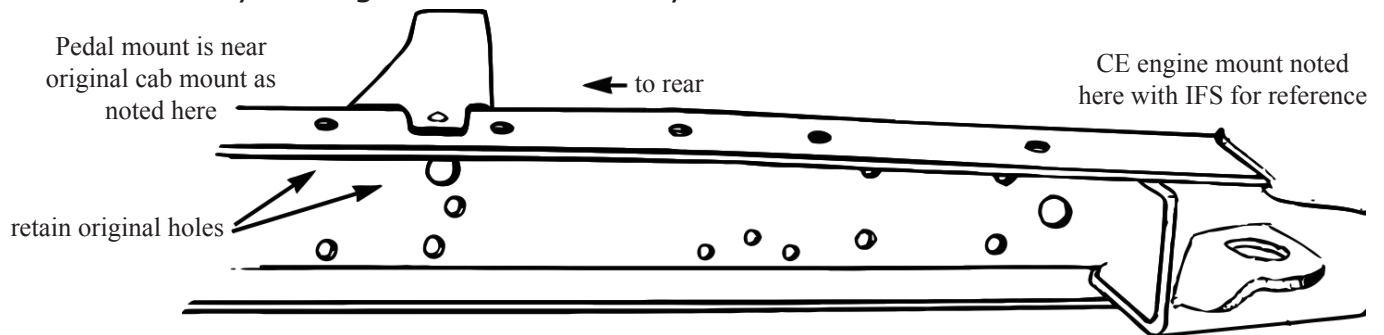

- 2 New pedal mount will install below frame lip on inside where the original master cylinder mount was located.


- 3 Top and side holes in the new pedal mount should line up with the rivet holes already in frame. Drill or file out any mismatched holes to accept required bolts. Finish mounting by locating and drilling out the bottom mounting holes. Install all bolts and tighten.

- 4 Install new pedal with appropriate push rod for power booster or manual master cylinder. This mount has a dual pattern for use with either a power booster or a manual master cylinder. Use the female heim end only for power.

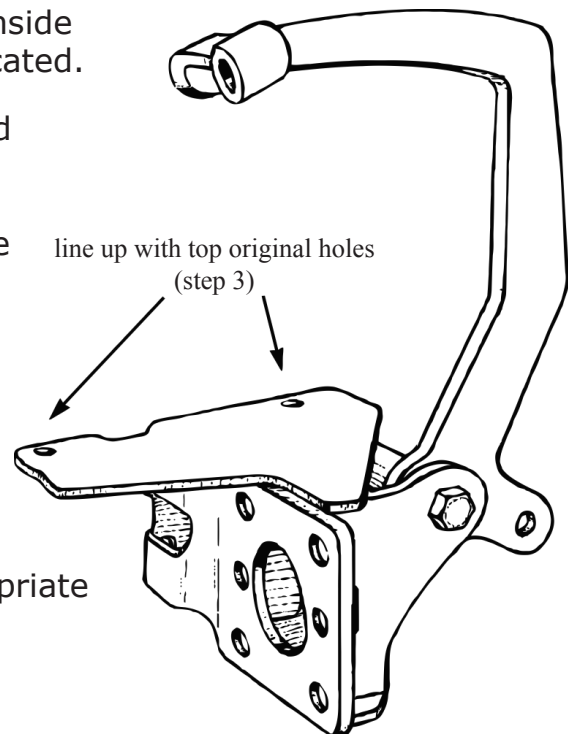

- 5 Installer is responsible for determining the appropriate travel and final operation.

this mount has a dual pattern for use with either a power booster or a manual master cylinder.

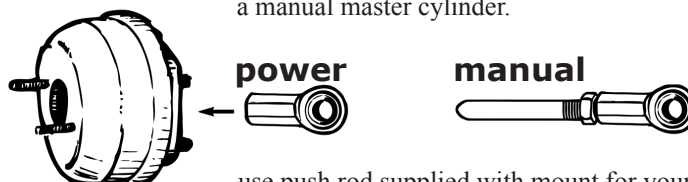

use push rod supplied with mount for your application and follow adjustment procedure on master cylinder instructions.