


AS-2030


1928-1931 Ford Weld-on Brake Pedal Bracket

- 1 Drill 7/8" hole on inside of frame (drivers side) according to location shown below.

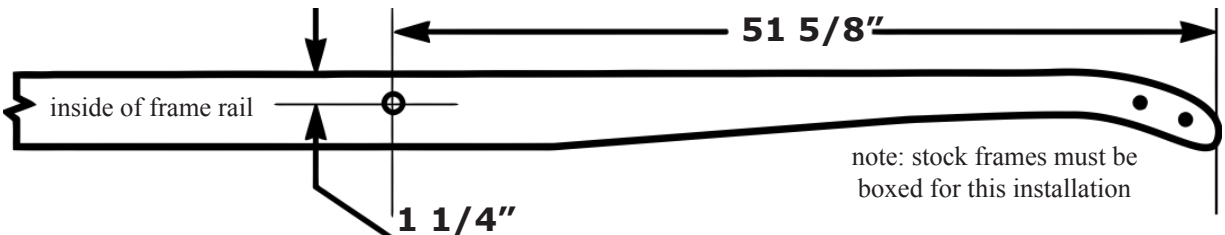


- 2 Locate weld on bracket with 1/2 inch bolt centered in hole. Tack weld in place.

- 3 Insert bolt through bracket. Thread both 1/2 inch nutes on bolt and place in hole with the first nut fitting mostly in the hole. Tack weld first nut in place as shown.

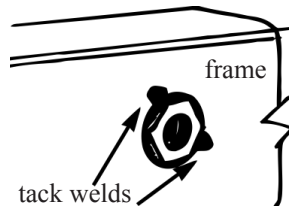

- 4 Double check all measurements. Remove bolt and weld bracket and nut on.

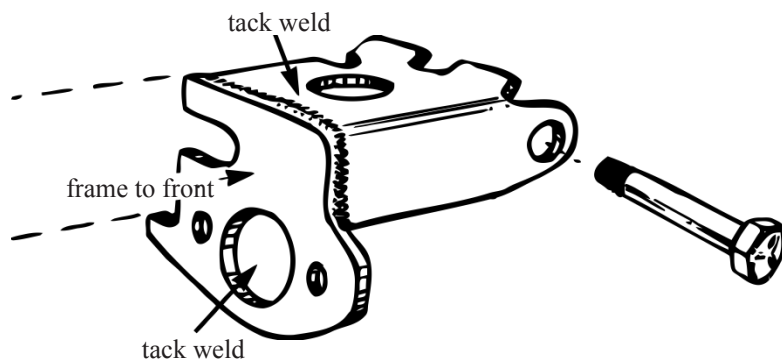

note: pedal linkage must be fabricated

use push rod supplied with master cylinder. cut to size needed

slide in tube, fit and weld. Fine tune adjustment with heim-joint on threaded end of tube

